





# HayTime Mechanical -Manual


1.

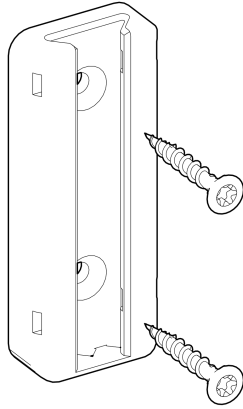


2.

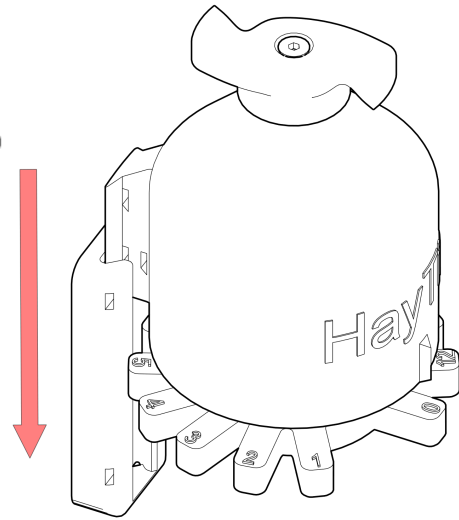

3.

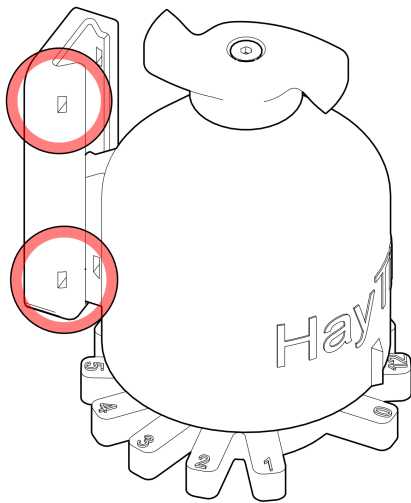

4.

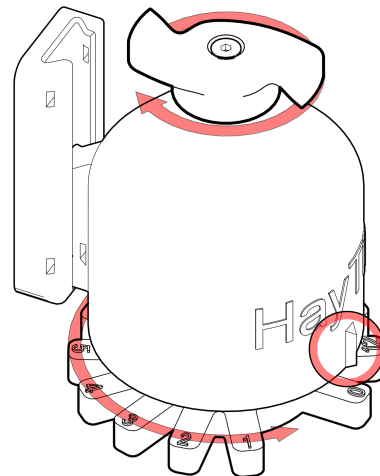

1. Attach the mounting rail to the desired location using the wood screws provided with the timer. The screw tip is Torx 20. Alternatively, you can secure the timer with cable ties instead of screws (in this case, start directly from step 2).
2. Slide the timer onto the mounting rail.
3. Optional: Secure the timer to the mounting rail with cable ties by threading them through the holes circled in the picture. This prevents the timer from moving on the mounting rail.
4. Set the timer duration (the time after which you want the timer to release) by rotating the handle at the bottom. Rotate the handle until the desired time aligns with the circled mark. Then, rotate the reloader on the top of the timer until it locks in place.

Spare parts and maintenance instructions can be found on our website [www.haytime.fi](http://www.haytime.fi). We are happy to answer any questions via email ([info@haytime.fi](mailto:info@haytime.fi)).